

SERVICE ANNOUNCEMENT

DATE:SEPTEMBER 2025

DOCUMENT NUMBER:CSA00001 VERSION:1

PRODUCT:MOWER

MODEL:CC151T / CC146T

PROBLEM:On the CC151T and CC146T lawnmowers, we've encountered a problem where the front plastic support for the front axle detaches from the machine's chassis due to loose screws. The part numbers for these pieces are (CC151T-02 and CC146T-19), and in some cases, using the lawnmower with this loose part can cause the mounting points to break.



As you can see in the example photo, the fixing screws are not in place

SOLUTION: Install an oversized screw kit, reference **CC151T-10**. This kit is compatible with both lawnmower models. It consists of five 6.3 x 22 mm screws, five 6 mm flat washers, and three 4.8 x 25 mm screws.

The 5 screws of 6.3 with washers are for attaching the plastic support to the chassis and the 3 screws of 4.8 mm are for attaching the trim to the plastic piece.

Note: Replace the plastic bracket (CC151T-02 and CC146T-19) only if the clips are broken.



SUBJECT: Fastening and mounting of the front wheels to the machine frame



Replace these 5 plastic cylinder screws with 5 stainless steel cylinder screws 6.3 x 25 mm with washers. These screws secure the front axle bracket to the machine frame.



Also replace the 3 plastic countersunk screws on the front panel with 3 stainless steel countersunk screws (4.2 x 25 mm) without washers.